
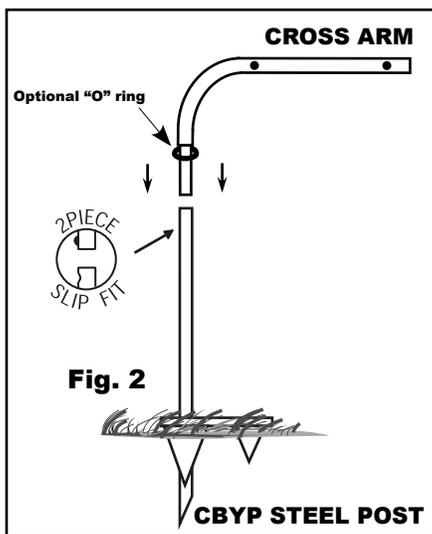




1. Insert ground anchor/Base at least 10" into the ground. Using one foot to stand on the flat top is the best way to insert base into the ground. (Fig. 1)

2. Insert the Cross Arm (CBYP or CYP) into the anchor/Base and push down until snap button "clicks" into place. (Fig. 2)

Optional "O" Ring may be used to insure a snug fit between the anchor/Base and the Cross Arm.

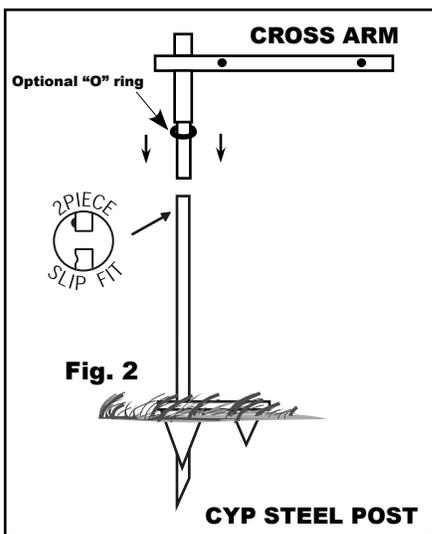

Hanging sign and mounting a sign rider follow steps below:

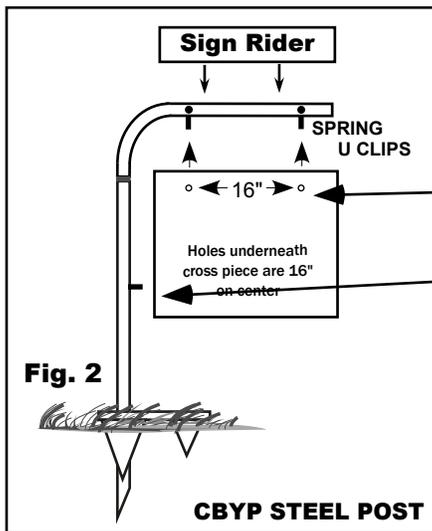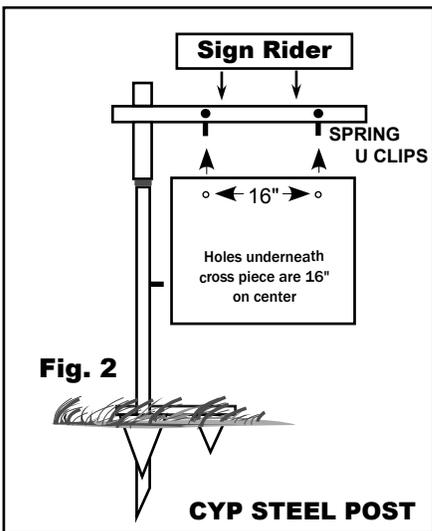

3. Use the aluminum U channel with thumb screw (included with hardware pack) to mount sign rider on top of the cross arm. Peel the protective paper off the U channel and place it on to the cross arm in a desired position. Spring U Clip Insert through sign, Pinch top and insert into holes located in the bottom of the arm.

NOTE: To clean, use a damp cloth. Mild Soap may be used sparingly. Avoid cleaning post with Windex or similar glass cleaning products.

For use in light wind conditions there is an additional hole in the side of the post for extra support.